

Chrys' Messenger Bag

1. Cut two of these large pieces; one of lining and one of your outside fabric.
2. Fold at the places where fold lines are marked and press.
3. Sew together along all edges except the very top (the "flap" end).
4. Turn right-side out and press.
5. If you are adding foam

Bag/Laptop Bag with two

 
Flap

o sections and optional c

This pattern is sized to fit my 12.1 inch screen laptop(Averate to most 13 inch laptops. There are two main compartments 13 inches by 10 inches, by 4 inches. Use a stiff fabric, such as fabric. Use nylon or cotton webbing for the straps.

organizer pockets.

ec 2575), which is a similar size compared
, and the finished bag should be about
s canvas, or use stiff interfacing on your

- 
6. Cut two of these divider pieces out of your lining fabric.
 7. Put these two pieces wrong-sides together, and sew along edgesd, leaving just enough open to turn right-side out.
 8. Turn right-side out.
 9. Fold at the marked fold lines, and press.
 10. Line the laft and

for padding, slide it inside.

Fold line

Back

Divider

Fold line

Fold line

Bottom

Fold line

right edges up with the left and right inside edges of the back.

11. Follow the same steps to add optional back pocket or the organizer pockets in desired location.

B

Fold line

ottom

Fold line



Fold line

Fold line

Organizer pockets

These can go under the flap on the front or on the front inside of the front compartment.

Stitch line

nt,

Stitch line

Stitch line

Side

Fold line

Front

Fold line

Sid

e

Optional Back Out

If you want to include this, divider, but place on the outside and sew everything closed.

Outside Pocket.

then follow the same steps as the
outside of the back before you